



MAINTAINING THE DISPENSER

If the dispenser is not used for a long period of time and becomes clogged, pour warm water into the dispenser and gently pump it to clear the blockage.

All surfaces should be cleaned with a microfiber cloth, glass cleaner or other non-abrasive and gentle agents. If stained, clean with warm soapy water. Use a soft cloth to wipe dry. Soap and cleaning agents must be regularly removed from stainless steel surfaces in order to prevent corrosion-like residues.

ATTENTION

- Never try inserting a sharp object e.g. pin into the soap nozzle.
 This can irreparably damage the pump and void the warranty.
- Never use solvents or aggressive household cleaners like bleach, acids (e.g. descalers) or ammonia-based bathroom cleaner to clean the product.
- Steel wool and hard brushes can permanently damage the surface of the steel.
- Should brown deposits appear around the lid or pump, remove with soapy water and a soft brush. Hard deposits can be scratched off with your fingernail. In order to avoid this, try changing to a liquid soap with a neutral PH.

